


# FLOOR UNIT

FOR DRAWER UNITS, INTERNAL HOLES ARE DRILLED TO TAKE RUNNERS, NOT SHELF AND HINGE PLATE – REFER TO INSTRUCTIONS INSIDE DRAWER KITS FOR DRAWER ASSEMBLY

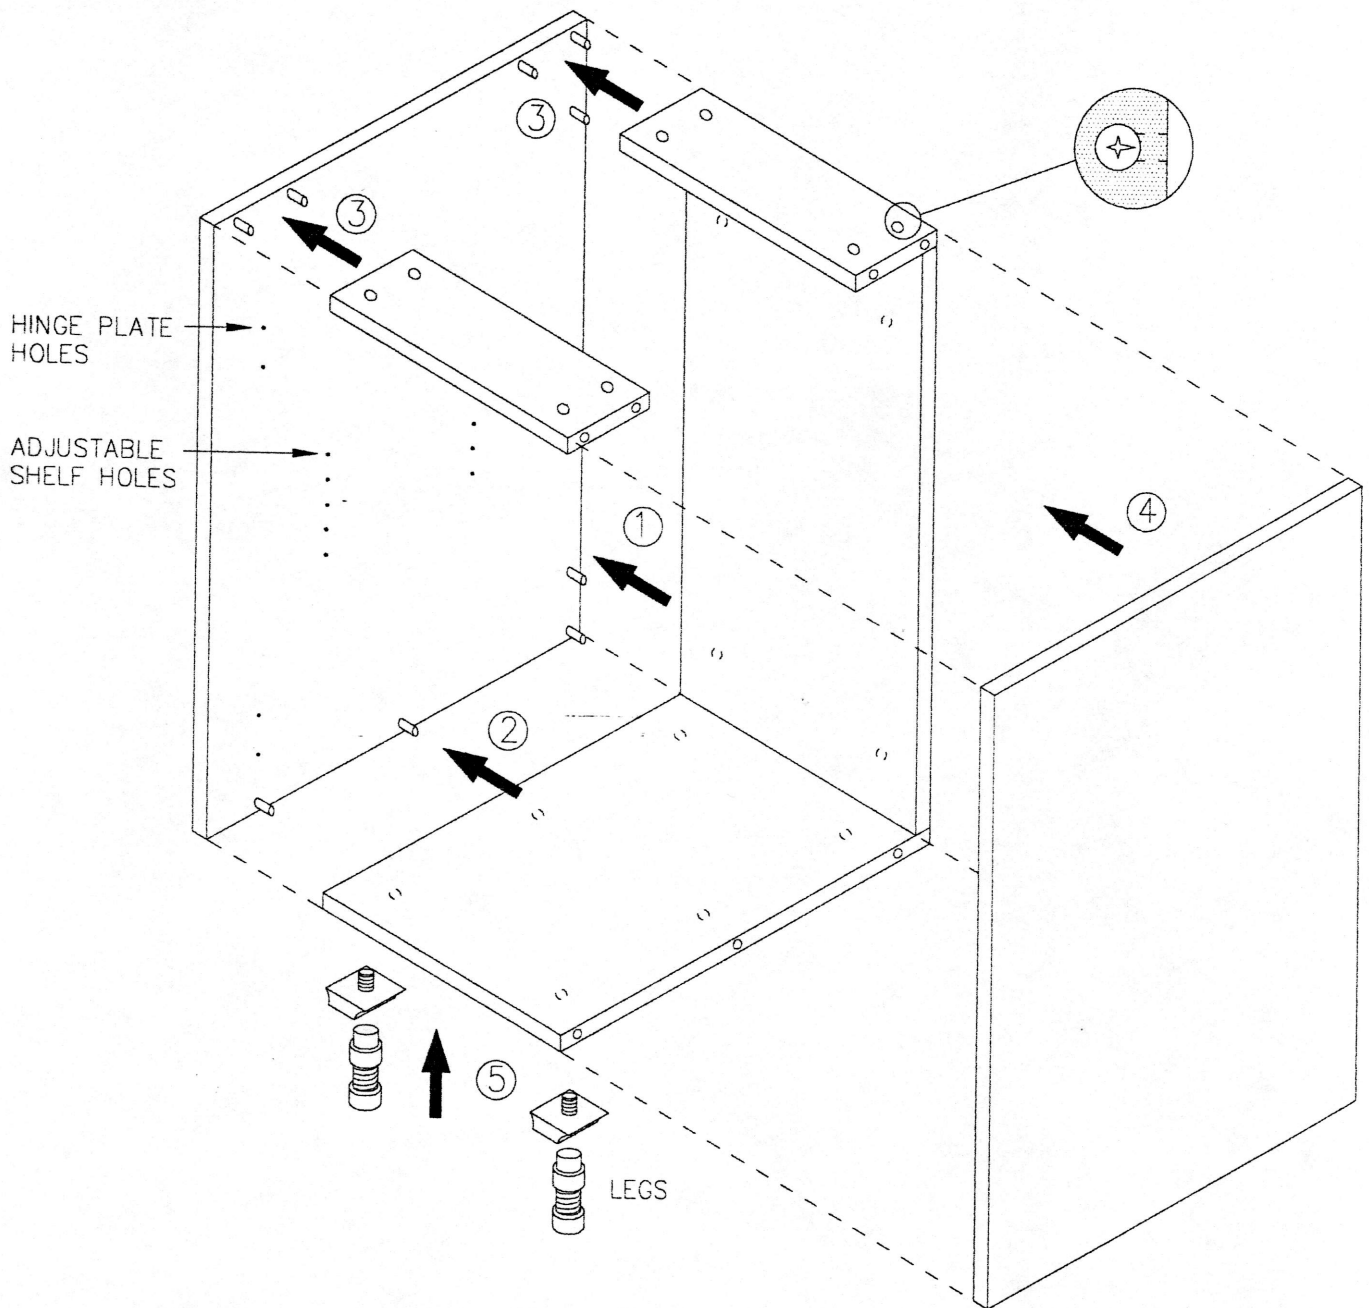

- ① JOIN BACK TO LEFT SIDE
- ② JOIN BOTTOM TO LEFT SIDE
- ③ JOIN TOP RAILS TO LEFT SIDE
- ④ JOIN RIGHT SIDE
- ⑤ FIT BASE LEGS