

# Tambortech

## Installation of the Tambortech Shutter

**Before Starting... Please read These Instructions Carefully**

1. Unwrap shutter package. Do not use any kind of blade! Take hardware from roll and re-roll the shutter.

NB:- Brackets are inside wrapping.

2. Place the rolled shutter, only, inside cabinet with round pin to the left side. Cover to protect from possible damage.

3. Fit brackets flush with carcass top using adjustable slot first. Tap to final position and fix other screws.

4. Place the front roller into the front slot.

5. Fit aluminium Guides against Bracket front and flush to the bottom of the carcass.

6. From Behind, place the rolled shutter into the prepared slot

7. Tension the shutter assembly in the direction indicated on the drawing with ( ) full rotations.

8 Carefully unroll the shutter over the front roller and feed into the aluminium Guides.



9. Fit the handle and the backing plate.

10. Test for correct tension and adjust if required by repeating the procedure.

11 Fit your pelmet/facing through the aluminium guides

12 Pelmet is a minimum of 40mm high plus carcass top thickness

13. All screws for brackets Guides Handle and Pelmet/Facing are supplied

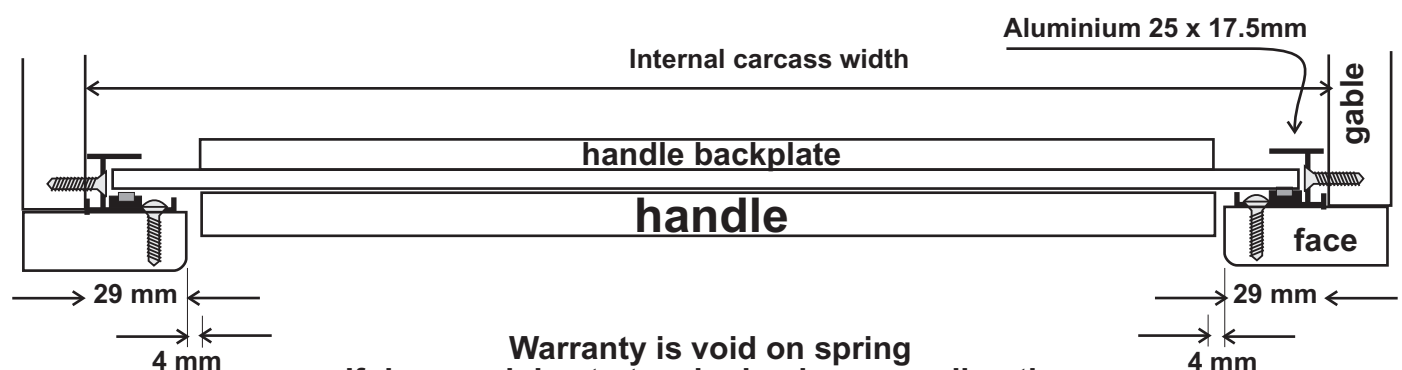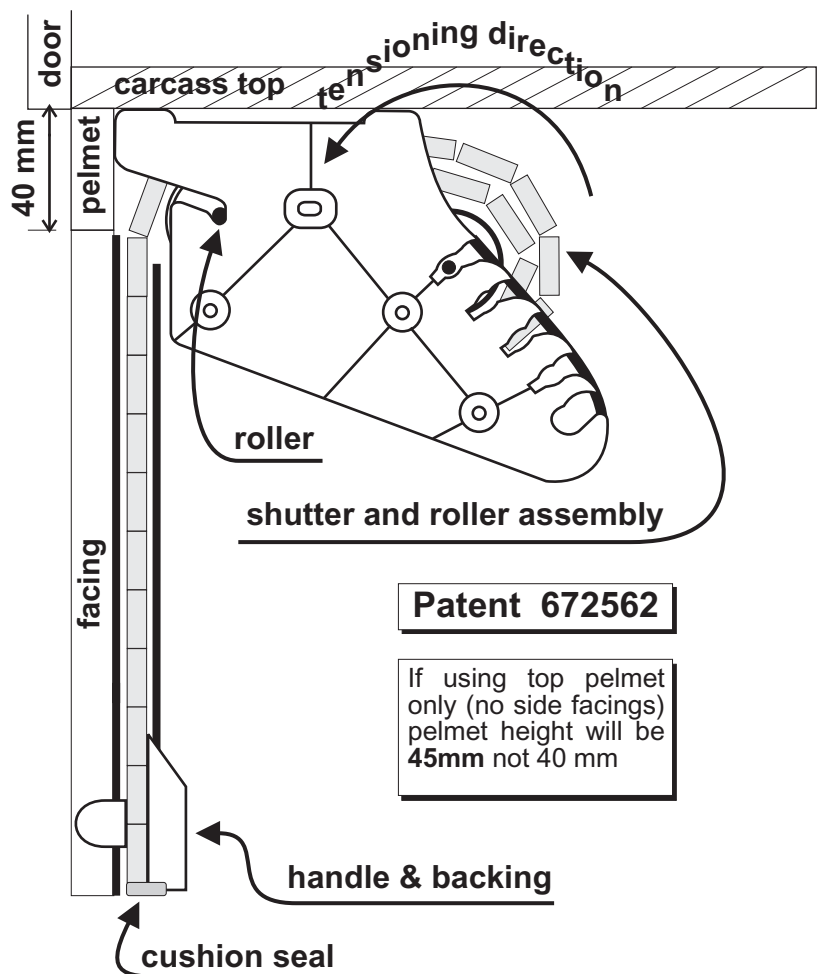

**Warranty is void on spring  
If damaged due to tensioning in wrong direction**