


# FLOOR UNIT – MICROWAVE UNIT UNDER BENCH

FOR DRAWER UNITS, INTERNAL HOLES ARE DRILLED TO TAKE RUNNERS, NOT SHELF AND HINGE PLATE – REFER TO INSTRUCTIONS INSIDE DRAWER KITS FOR DRAWER ASSEMBLY

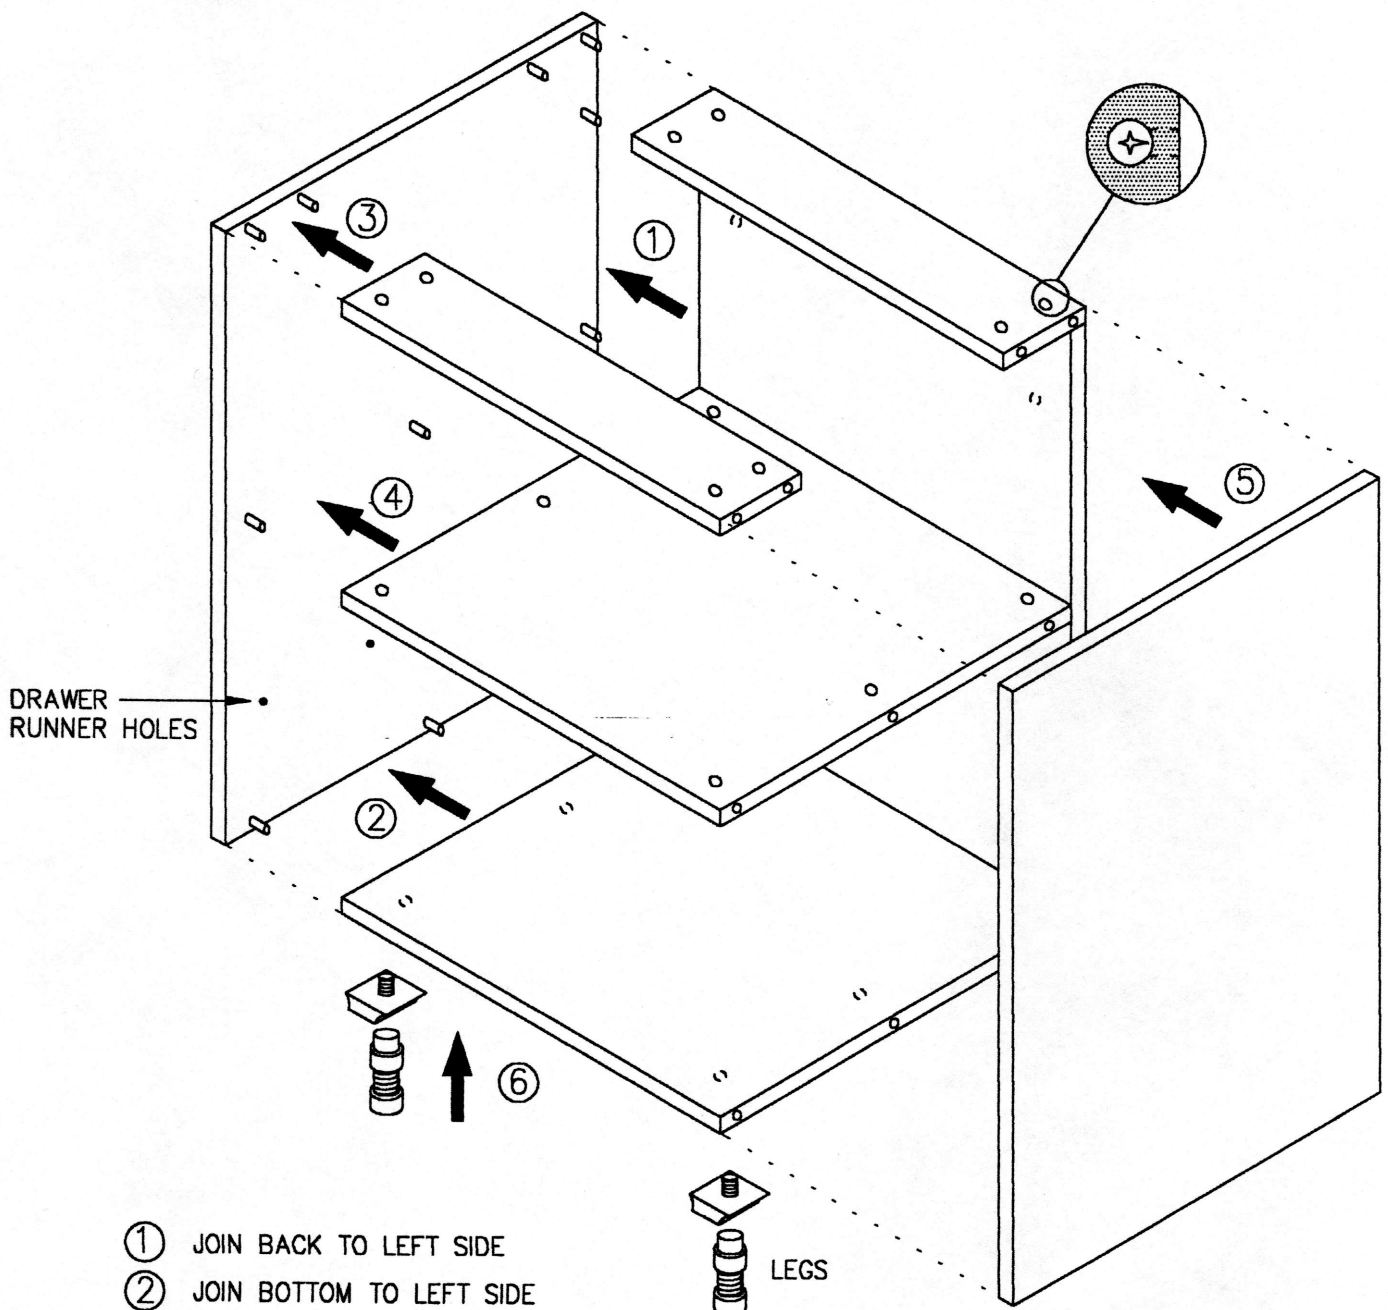

- ① JOIN BACK TO LEFT SIDE
- ② JOIN BOTTOM TO LEFT SIDE
- ③ JOIN TOP RAILS TO LEFT SIDE
- ④ JOIN FIXED SHELF TO LEFT SIDE
- ⑤ JOIN RIGHT SIDE
- ⑥ FIT BASE LEGS
- ⑦ REFER INSTRUCTIONS IN DRAWER KITS