


# WALL CORNER UNIT

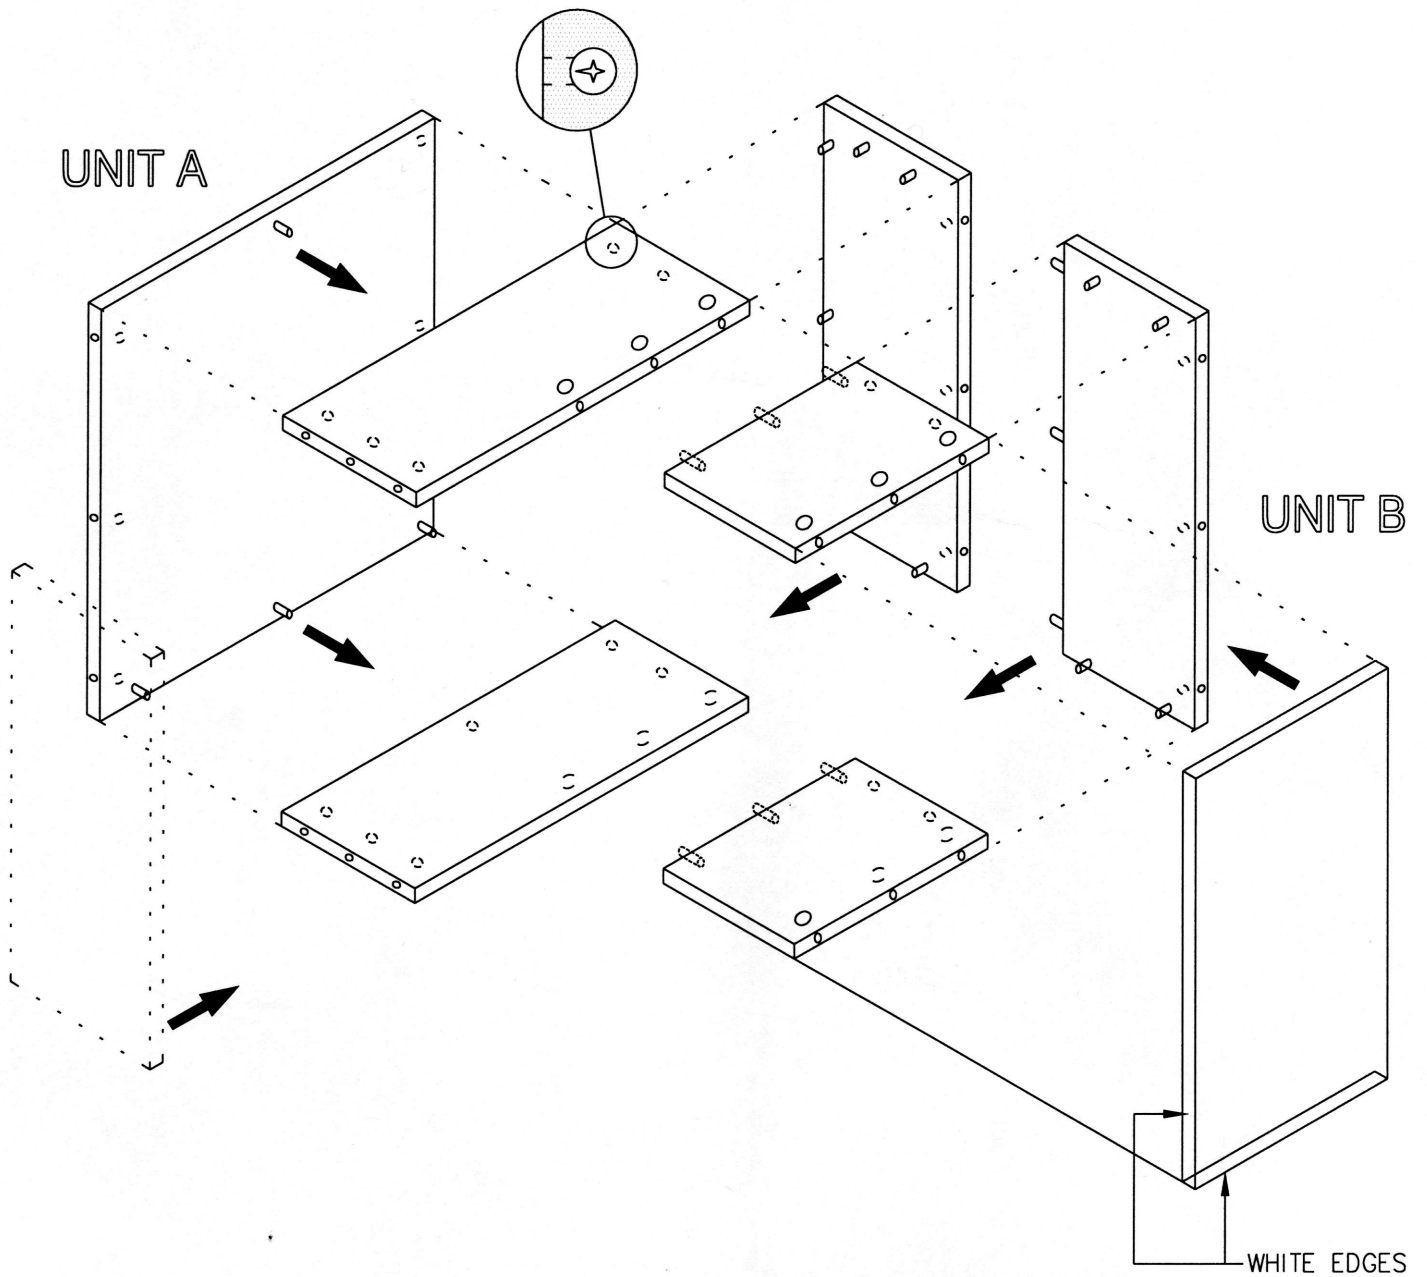

- ① JOIN BASE, TOP TO BACK OF 'A'
- ② FIT SIDE OF 'A' UNIT
- ③ FIT BASE TOP TO BACK OF 'B'
- ④ JOIN SIDE OF 'B'
- ⑤ JOIN UNIT A & B WITH CAM & DOWELS IN BASES, TOPS AND SIDE WITH BACK
- ⑥ JOIN SHELF AND INSERT INTO CABINET ON SHELF SUPPORTS