


WARDROBE DRAWER UNIT

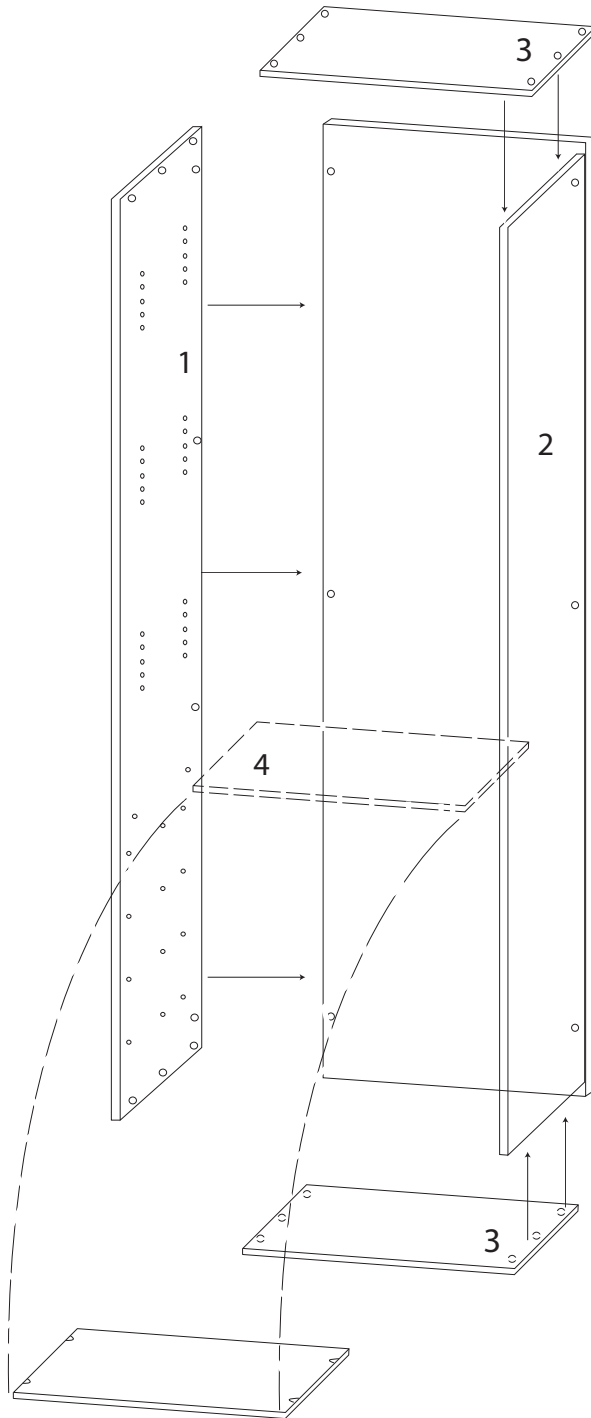

Construct cabinet with the back lying on the floor and cams to the outside

1. Join Left side to Back
2. Join Right side to Back
3. Join Top & Bottom to the Side with cams to outside
4. Screw euro dowels into the Fixed Shelf position (set of holes above top drw runner holes)
5. Gently tap Shelf Cams into half holes in Fixed Shelf
6. Lower Fixed shelf over Euro Dowels & turn clockwise to tighten
7. Fit the adjustable shelves in desired positions using shelf supports
8. To fit Drawers Refer Drawer kit Instruction.
Fit the Left & Right Runners to the Predrilled Holes on the Sides with the Euro Screws. The Front of the runners is 16mm back from the front edge