


## Pocket Door Laundry Cabinet Assembly

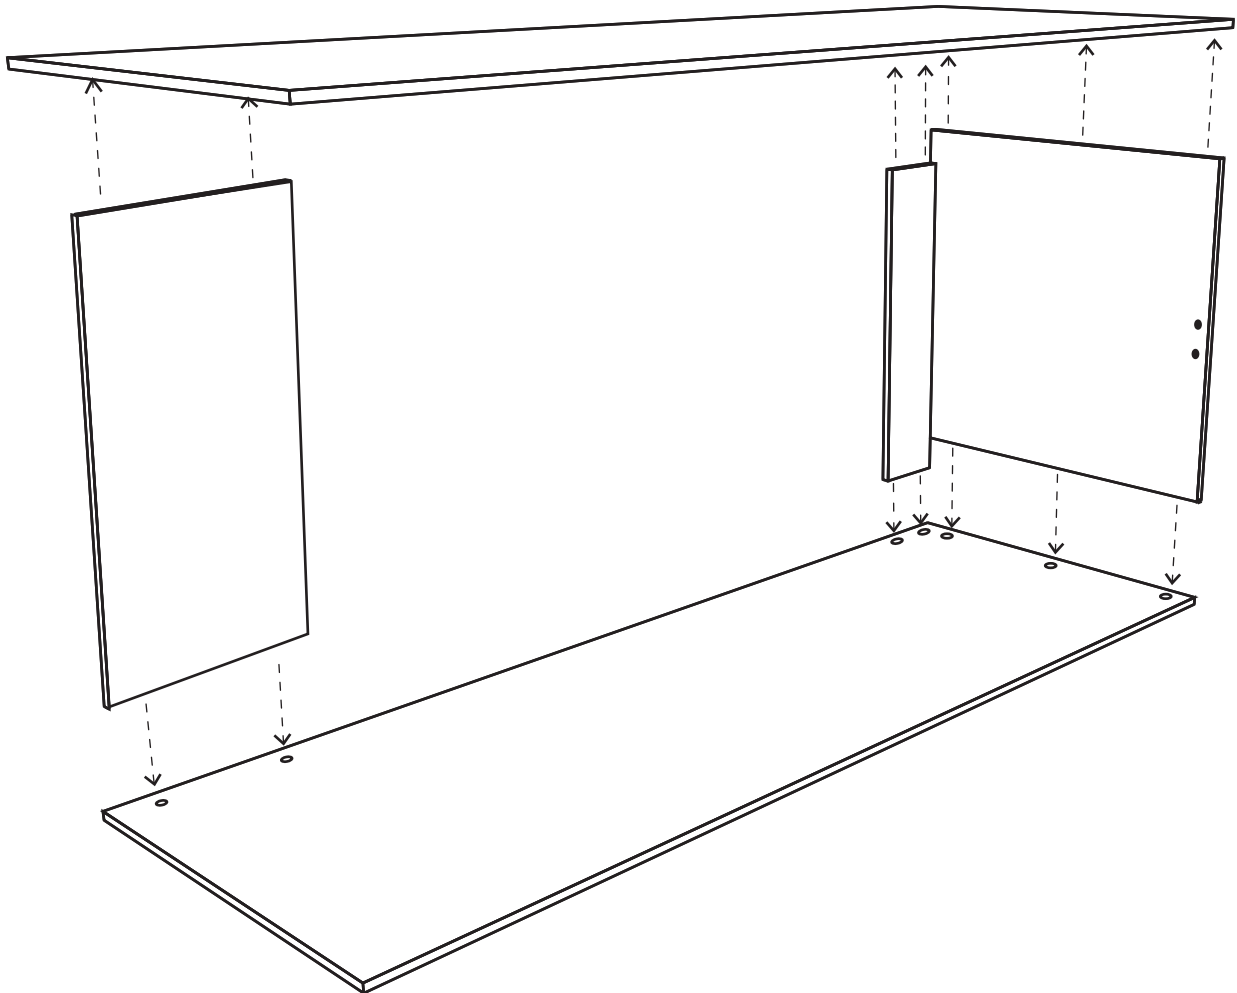

Construct cabinet with the right side lying on the floor and cams to the outside

1. Join the top and rails to the right side and tighten cams
2. Fix the other side and tighten the cams
3. Stand the cabinet upright
4. Fix the pocket door runners to the cabinet sides with euro screws supplied
5. Fix the rail to the plates attached to the runners using 6x16mm screws
6. Fix the hinges to the doors
7. Hang the hinges on the mounting plates on the runners
8. Once runners are pushed back into the cabinet, attach doors.
9. Screw the handles to the doors
10. Screw stoppers to side rear to stop the doors from sliding back to far and hitting the handles
11. Screw stoppers to top underside to stop over-closing